

## **RELEASE NOTES**

| Components  | Versions  |
|---|---|
| API software<br>UTView_64.exe<br>UTView_32.exe        | 2.0   |
| Library<br>Sidev_64.dll<br>Sidev_32.dll               | 6.0   |
| Additional programs SIPATOOLS_64.exe SIPATOOLS_32.exe | 2.0   |
| Firmware<br>FAAST-PA<br>SOCO-X-UT                     | frm_pa_080719.bin<br>frm_soco_080719.bin  |
| Configuration files For all devices Additional files  | cfg_generic_170719.bin  |
| FAAST-PA  | cfg_pa_1x32_080719.bin, cfg_pa_2x32_080719.bin, cfg_pa_3x32_080719.bin, cfg_pa_4x32_080719.bin, cfg_pa_1x64_080719.bin, cfg_pa_2x64_080719.bin, cfg_pa_1x96_080719.bin, cfg_pa_1x128_080719.bin, cfg_pa_1x32_128_080719.bin |
| SOCO-XP-UT  | cfg_soco_xp_080719.bin  |
| SOCO-8S-UT  | cfg_soco_8s_080719.bin  |
| SOCO-1-UT   | cfg_soco_1_080719.bin   |
| Interface modules INTLOG_IN: INTANA_OUT: INTLOG_OUT:  | INTLOG_IN_V_2_3.pof<br>INTANA_OUT_V_2_3_1.pof<br>INTLOG_OUT_V_2_3_1.pof   |

## **New/Improved features**

| ID | Description   |
|----|---|
|    | Back Echo Tracking feature has been implemented.  |
|    | Acquisition under conditions has been implemented   |
|    | Add "Usage" function to check timing constraints according to type of use.  |
|    | Add Extended A-scan mode (only for FAAST-PA) to return A-scan data with a number of points depending on the size of detection and the frequency sampling.  Add Full Range A-scan mode (only for SOCO-X-UT) to return a 16bit A-scan data with a number of points depending on the size of detection and the frequency sampling. Gates and DAC are inactive when this Full range mode is ON! |
|    | Notes: A-scan mode and bit format are defined into UTView.ini file. A-scan data frame has been changed.  Dynamic Distance Focusing (DDF) has been implemented (only for FAAST-PA)   |
|    | Improve performance of SI_Get_Ascans functions  |

## **Bug fixed**

| ID | Description  |
|----|--|
|    | Fix an issue about counter values returned into the data frames. |
|    | ENBALE input of INIT_LOGIN card was not enabled.                 |
|    | Correct a bug to enable multiple sequences on SOCO-xP-UT models. |
|    |  |

8 Rue des Abbesses 77580 Crécy la chapelle FRANCE

> Tel: (33) 1 64 63 81 09 Fax: (33) 1 64 63 60 21